

600 Series Assemble Stand

Purpose


The document is aimed to illustrate the procedure of stand assembly for 600 series scanners.

Scope

This document is applicable to SG6XX, SG6XXBT, LG6XX, LG6XXBT, IG6XX and IG6XXBT series scanners.


Components

Each component of the stand is illustrated as following.

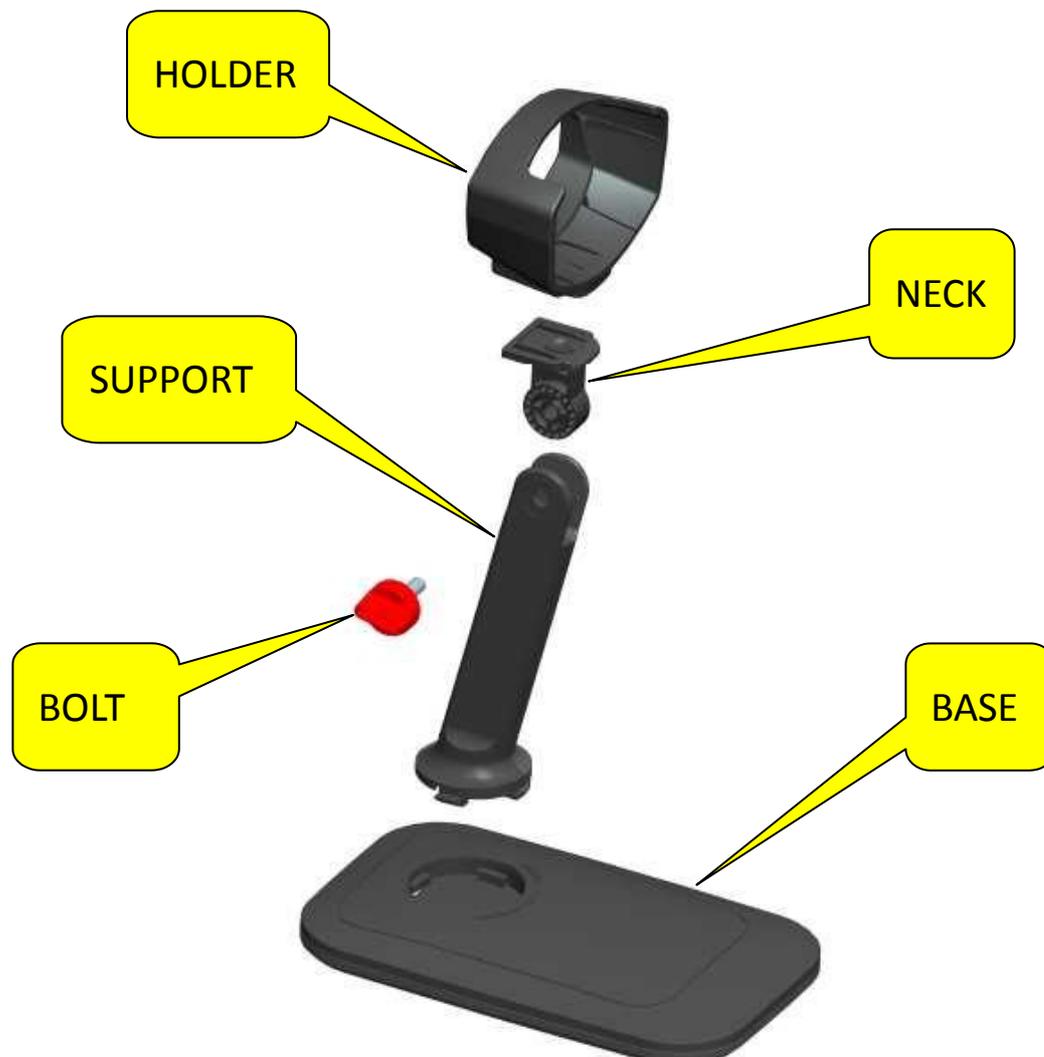


Procedure

Please follow the procedure below to assemble stand.

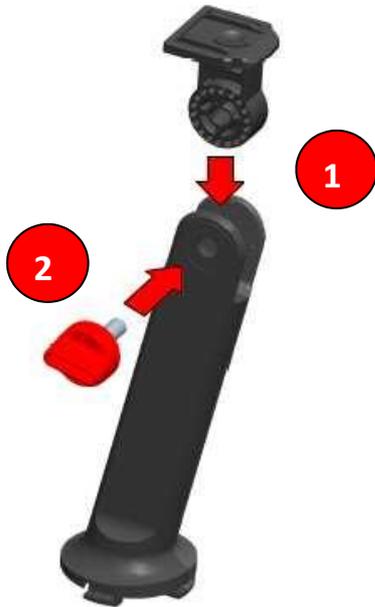

1 Insert the NECK on the top of SUPPORT.

2 Insert and secure the BOLT in the screw hole.

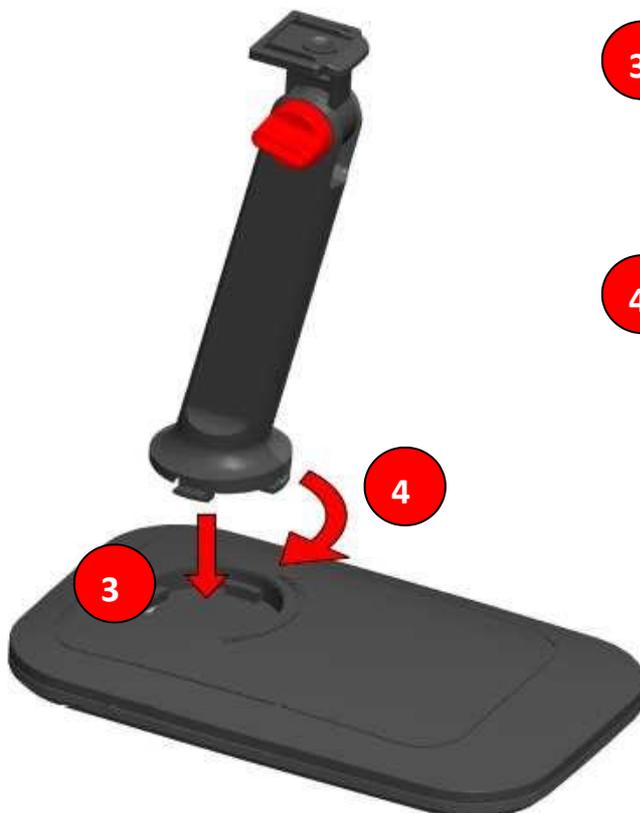

3 Insert the SUPPORT on the BASE.

4 Turn the SUPPORT clockwise about 45° until locked on the BASE.



5 Attach the HOLDER on the NECK.



Finish assembly.